


DVD/CD R/W installation (For AV009)

1. Tools

Remainder: The jumpers of HDD and DVD/CD R/W must be set to master !!!


You must have a screwdriver to install them.

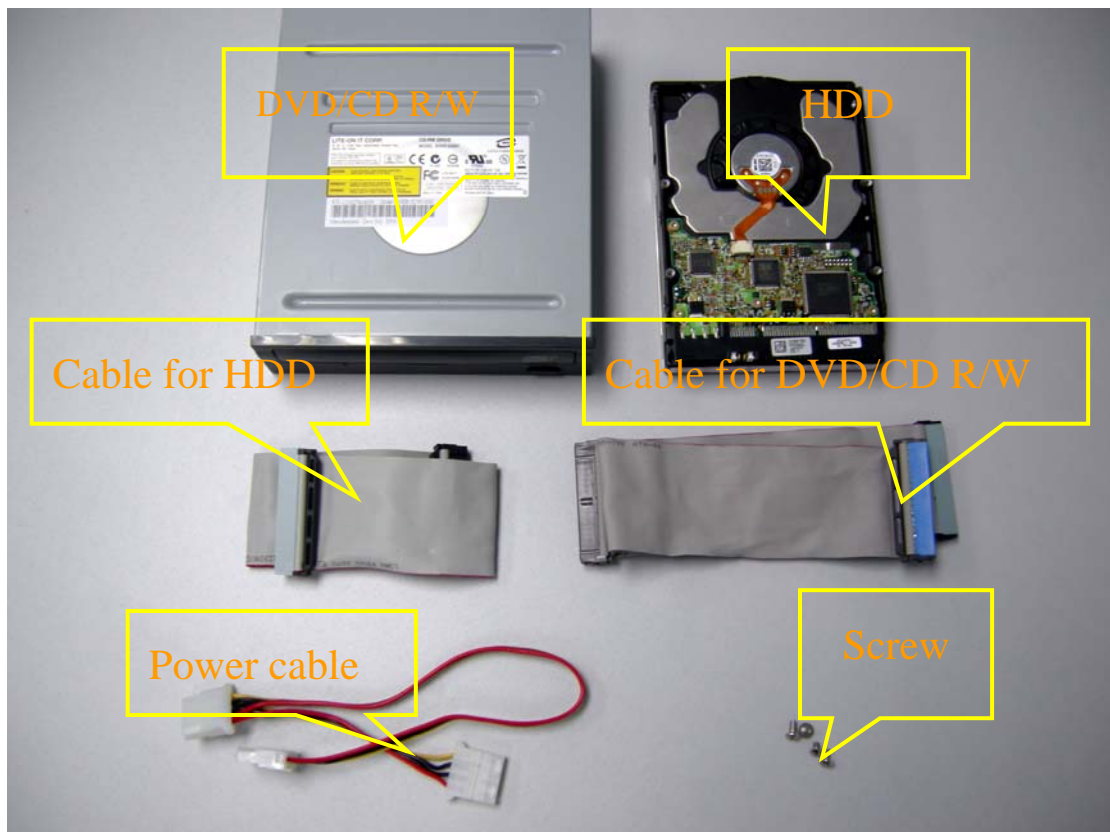


2. Install the HDD and DVD/CD R/W with bracket as follow:

Put the DVD/CD R/W into bracket and fix it with screws.


Then put the bracket into DVR.

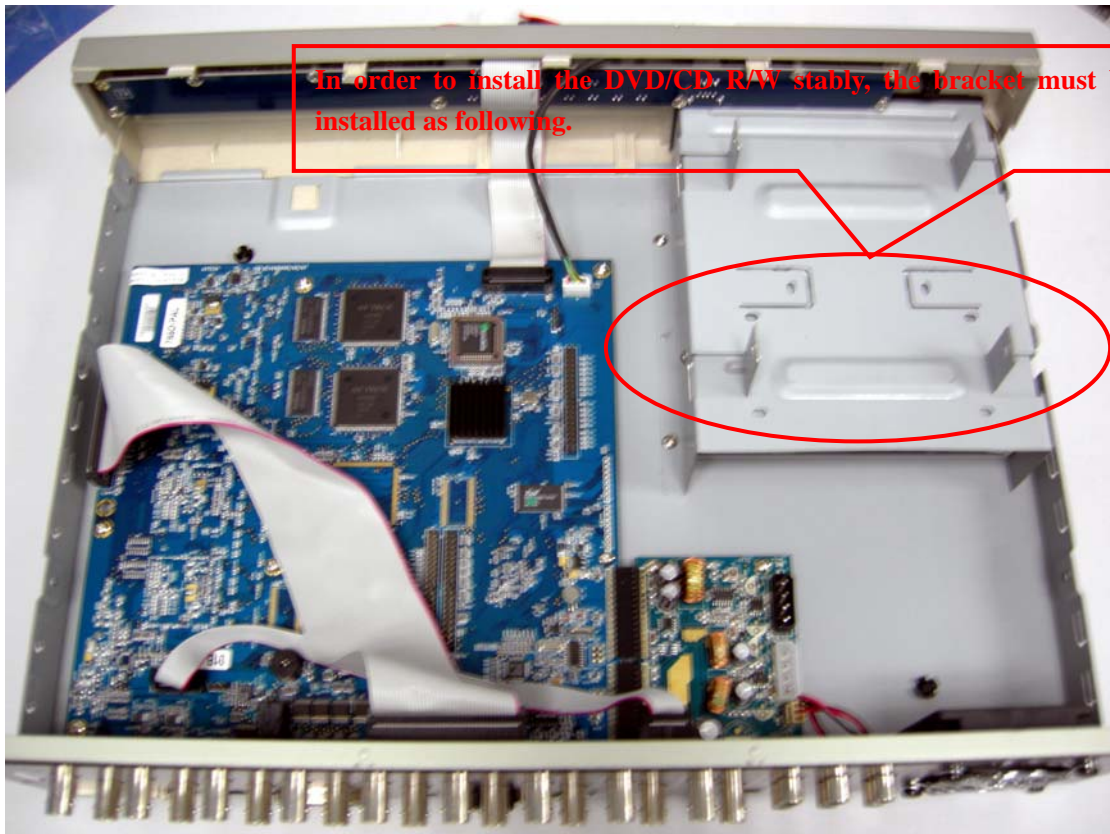


3. The power cable should be plugged precisely.

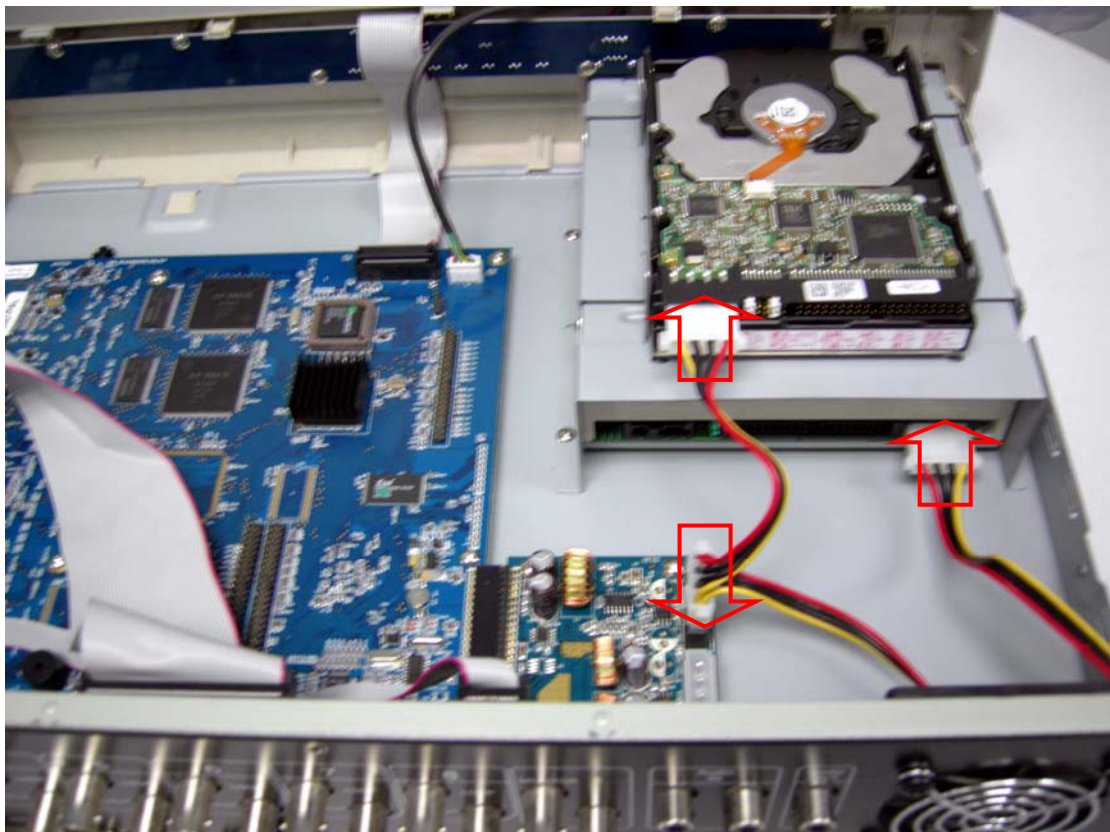


4. Find the interface pins for HDD and DVD/CD R/W.

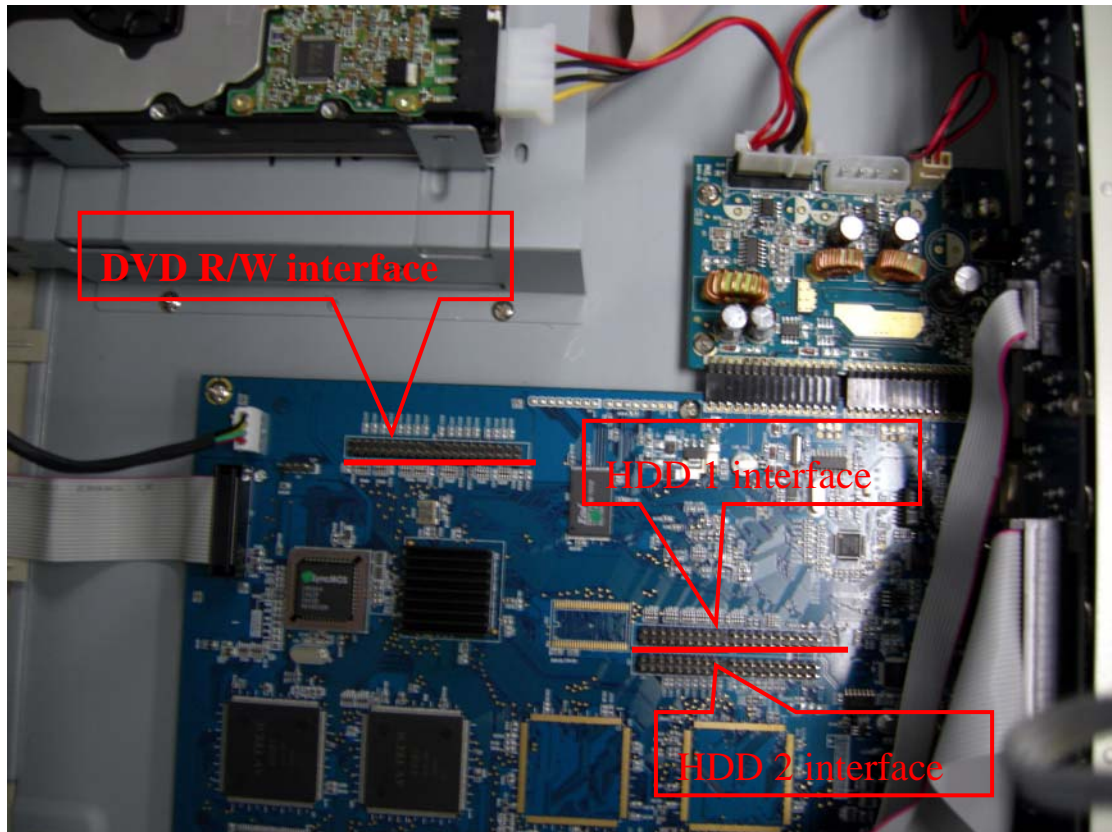

5. Connect the Data cable for DVD/CD R/W: Blue to interface pins, Black to DVD/CD R/W.

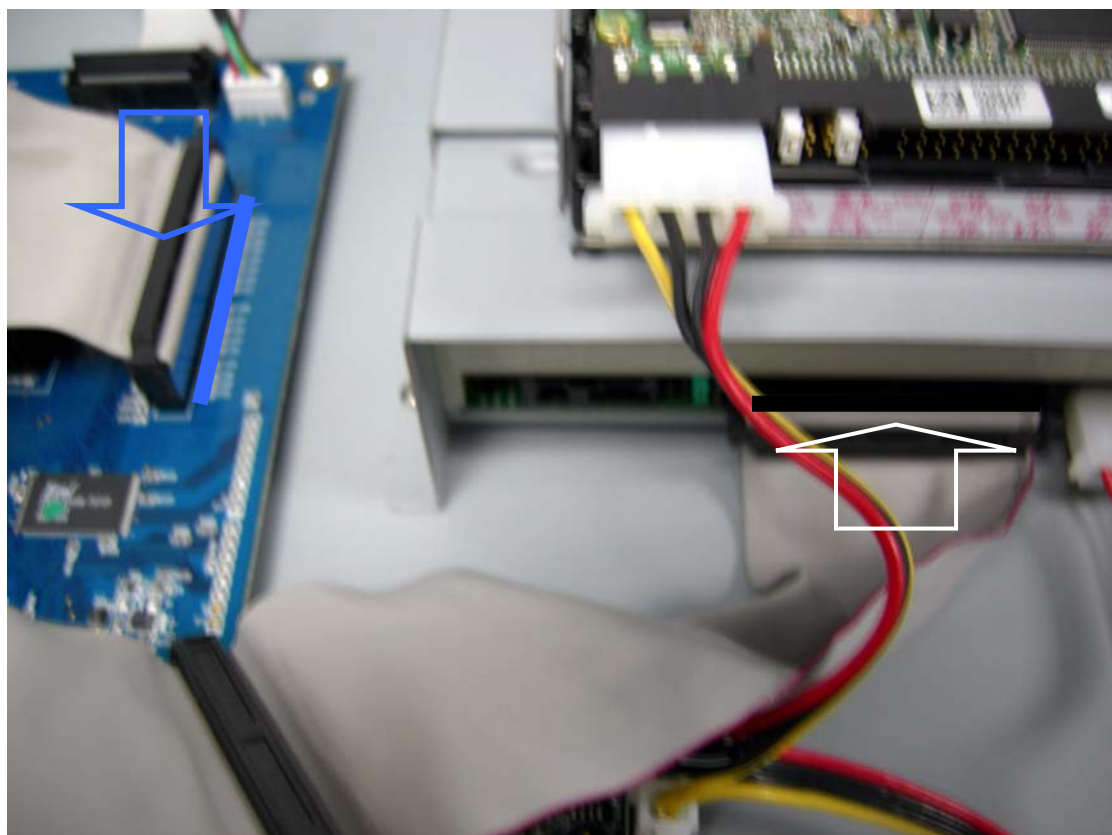

6. Connect the data cable for HDD: Grey to interface pins, Black to HDD.

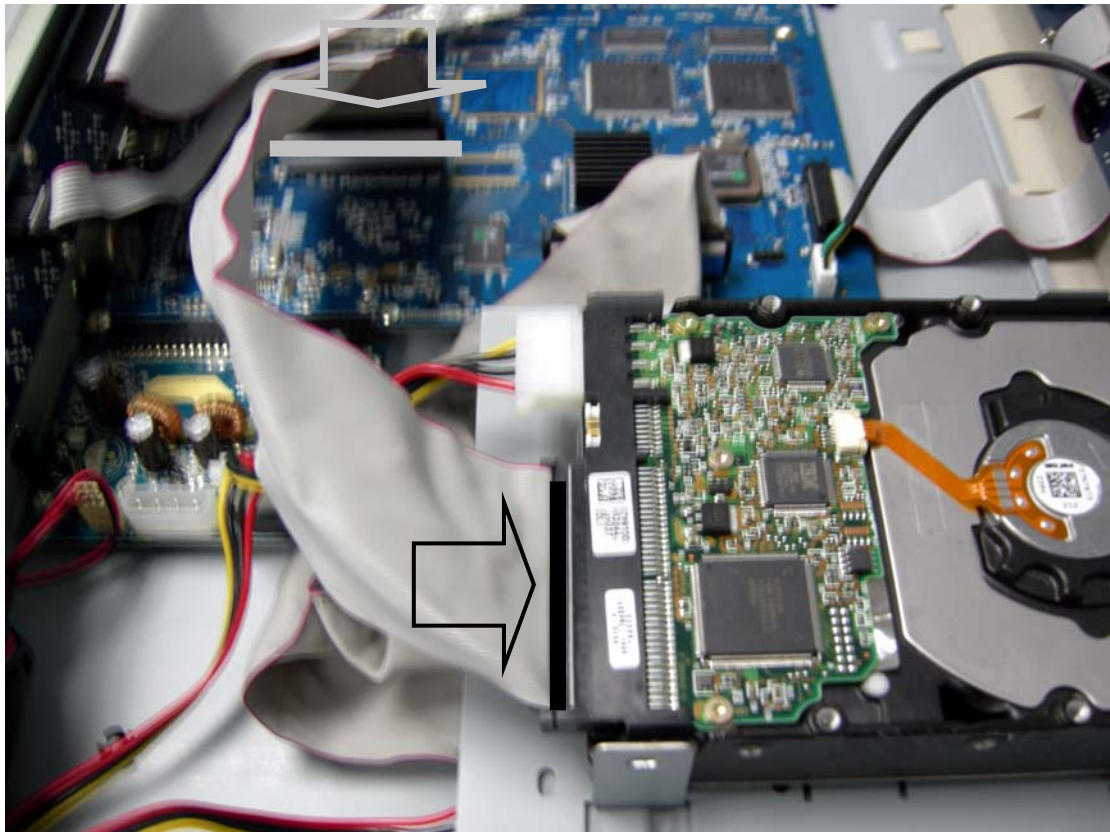

7. Completed.

